SCOTT®

i-CSX 15

DUAL ALARM CLOCK FM/AM PLL RADIO
WITH iPod/iPhone DOCKING STATION AND AUTOMATIC
TIME SETTING SYSTEM

Instruction Manual

CE

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

PLACEMENT

. Do not use the unit in places which are extremely hot, cold, dusty, or humid.
. Place the unit on a flat and even surface.
. Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.
. Do not place naked flame sources such as lighted candles on the apparatus.
. Use the apparatus only in moderate climates (not in tropical climates).
. Do not expose the apparatus to dripping or splashing.
. Do not place objects filled with liquids, such as vases, on the apparatus.

SAFETY

. When connecting and disconnecting the AC power cord from the AC mains outlet, pull the plug and not the cord itself. Pulling the cord may damage it and may be dangerous.
. The mains plug must remain readily operable.
. When you are not going to use the unit for a long period of time, disconnect the AC power cord from the AC mains outlet.

AC VOLTAGE

. Before use, check that the rated voltage of your unit matches your local voltage.

CONDENSATION

. When there is condensation inside the unit, it may not function normally.
. Unplug the unit for 1 to 2 hours before turning the power back on, or gradually heat the room up and dry the unit before use.
. Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
. Ensure that the ventilation is not impeded by covering the ventilation openings with items such as newspapers, tablecloths, curtains, etc.

BATTERIES

. Pay attention to the environmental aspects of battery disposal.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user to the presence of "dangerous voltage" inside the unit.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

ATTENTION: To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit, Refer all servicing to qualified persounnel.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

TABLE OF CONTENTS

PRECAUTIONS..... 1
TABLE OF CONTENTS..... 2
BOX CONTENTS..... 2
LOCATION OF CONTROLS..... 2
POWER SUPPLY..... 4
BASIC OPERATION..... 4
RADIO OPERATION..... 6
PLAYING AN iPod/iPhone AND CHARGING THE INTERNAL iPod/iPhone BATTERY..... 7
AUX IN FUNCTION..... 8
MAINTENANCE..... 8
TROUBLESHOOTING GUIDE..... 9
TECHNICAL SPECIFICATIONS..... 9

BOX CONTENTS

1. Unit and clock back up batteries
2. AC/DC adapter
3. Instruction manual
4. AM loop antenna

LOCATION OF CONTROLS

Unit

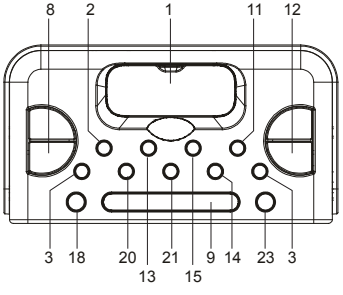

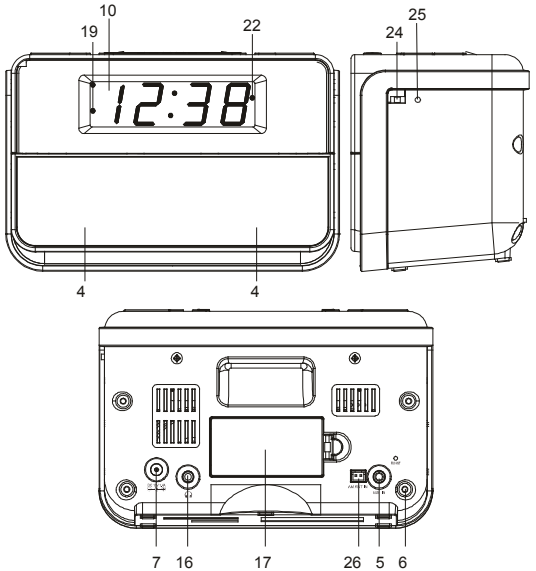

1. Docking station for iPod/iPhone
2. ⏻/ON button
3. ALARM SET 1/2 button
4. Speakers (2 x)
5. **AUX IN** jack
6. FM antenna wire
7. **DC IN** jack ⊖—●—⊕
8. **VOLUME ▲/▼** buttons
9. **SNOOZE/DISPLAY** button
10. LED display
11. ⏯ **PLAY/PAUSE**, **MONO/STEREO** button
12. **TUNE /SKIP** buttons
13. **FUNCTION** button
14. **MEM/SET** (Memory/Clock set) button
15. **DIMMER** button
16. Headphones jack 🎧
17. Clock back up battery compartment
18. **SLEEP** button
19. **ALARM 1/2** LED indicators
20. **PRESET -** / 🔀 (Shuffle) button
21. **PRESET +** / 🔁 (Repeat) button
22. **FM STEREO** LED indicator
23. **NAP** button
24. **DST** (Daylight Saving Time) **ON/OFF** switch
25. **RESET** button
26. AM antenna socket

POWER SUPPLY

Power supply for the unit

Insert the AC/DC adapter power cord into the AC mains outlet with a 100-240V AC ~ 50/60Hz power source and the other end into the **DC IN 10V** ⊖—●—⊕ jack at the back of the unit.

Installing the clock back up battery

The clock time can be maintained during a power failure by using 2 x AA/ LR06 batteries (supplied).

Battery insertion

1. Open the battery compartment on the back of the unit by pressing on the battery compartment catch whilst removing it.
2. Remove the old batteries and insert 2 x AA/ LR06 batteries (alkaline batteries are recommended) into the battery compartment, following the correct polarities marked inside.
3. Replace the battery cover.
   Note: For optimum performance, the batteries should be replaced every year

Precautions when using batteries

1. Replace only with the same or equivalent type.
2. Do not mix different types of batteries together (e.g. alkaline, rechargeable and standard (carbon zinc)) or old batteries with fresh ones.
3. Exhausted batteries must be removed to prevent any battery leakage.
4. Dispose of batteries properly according to environmental regulations.

BASIC OPERATION

ON/ Standby mode

After connecting the power supply (refer to "**POWER SUPPLY**"), the unit is in standby mode and the clock time will automatically be set correctly. All you need to do is slide the **DST** switch to the **ON** or **OFF** position for daylight saving time in winter and summer. Press the ⏻/ON button to turn on the unit and press it again to go to standby mode.

Setting the clock manually

If a power failure occurs and the clock back up batteries are flat or have not been inserted into the unit, you can set the time manually after inserting fresh batteries.

1. In standby mode, press and hold down the **MEM/SET** button and the clock digits will flash.
2. Press the **TUNE/SKIP** buttons to set the time.
3. Press the **MEM/SET** button to confirm.

Alarm operation

The unit allows you to wake up to the sound of the buzzer or to music (Radio/iPod (iPhone)).

Set the alarm time

1. Press and hold down the **AL1** or **AL2** button and the alarm time digits will flash.
2. Press the **TUNE/SKIP** buttons to set the alarm time.
3. Press the **AL1 or AL2** button to confirm.

Enable/ Disable the alarm function

1. Press the **AL1** or **AL2** button repeatedly to enable or disable the alarm function and select the following alarm modes: buzzer (buz), radio (rAd), iPod or iPhone (IPod). The corresponding indicator (**AL1** or **AL2**) will light up on the LED display.
2. When the alarm function is on and the preset alarm time is reached, the alarm will sound in the selected alarm mode for one hour.
3. To stop the alarm, press the ⏻/ON button. The alarm will sound again at the same time the next day.

Note:

If **iPod/iPhone** mode is selected, make sure the iPod or iPhone is inserted in the docking station and the volume is set to a suitable level. Otherwise, the unit will automatically switch to buzzer mode.

Snooze function

When the alarm sounds, press the **SNOOZE/DISPLAY** button to stop the alarm temporarily and it will sound again after 9 minutes. To cancel the **SNOOZE** function and repeat the alarm the next day, press the corresponding **AL1** or **AL2** button.

Note:

The snooze duration can be adjusted from 30 minutes to 1 minute by pressing and holding down the **SNOOZE/DISPLAY** button and then using the **TUNE/SKIP** buttons.

Sleep function

You can program the unit so that the music you are listening to stops automatically after a certain amount of time (up to 120 minutes).

1. Press the **SLEEP** button repeatedly to select the duration from 90, 60, 30, 15, 10 minutes to off. You can also use the **TUNE/SKIP** buttons to set this duration minute by minute.
2. When the preset sleep duration elapses, the unit turns off automatically.
3. To cancel the sleep function before the preset sleep duration elapses, press the ⏻/ON button to turn off the unit immediately.

Nap function

The unit allows you to wake up after a certain amount of time (up to 120 minutes).

1. Press the **NAP** button repeatedly to select the duration from 20, 30, 60, 120 minutes to off. You can also use the **TUNE/SKIP** buttons to set this duration minute by minute (from 10 to 120 minutes).
2. When the preset nap duration elapses, the buzzer will sound for one hour.
3. To pause the alarm, press the **SNOOZE/DISPLAY** button and the alarm will sound again after the snooze duration has elapsed. To stop the alarm, press the ⏻/ON button.

FUNCTION select

When the unit is switched on, press the **FUNCTION** button repeatedly to select one of the following sources: radio (FM/ AM), iPod/iPhone (IPod) or AUX IN (AuH).

VOLUME control
Press the VOLUME ▲/▼ buttons to adjust the volume level.

Connecting headphones
Plug the headphones (not supplied) into the headphones jack at the back of the unit for private listening. The speaker output will be shut off automatically.

DIMMER control
Press the **DIMMER** button to select the brightness of the display (high or low).

DISPLAY function
In radio mode, the clock is always displayed. You can press the **SNOOZE/DISPLAY** button to display the frequency for 5 seconds.

RESET function
Press the **RESET** button with a sharp object to reset the unit.

RADIO OPERATION

Listening to the radio
1. When the unit is switched on, press the **FUNCTION** button to select FM or AM radio mode.
2. Press and hold down the **TUNE/SKIP** button for more than 1 second and the unit will automatically search up / down for a radio station. For manual fine-tuning, you can press these buttons repeatedly to adjust the frequency step by step.

FM Stereo
In FM mode, press the **MO/ST** button to select mono or stereo sound. The **FM STEREO** indicator will light up when the unit receives a station with a strong signal and stereo sound.

Achieve optimum reception
In FM mode, extend and position the FM antenna to achieve optimum reception.
In AM mode, connect the loop antenna and orientate the unit to achieve optimum reception.

Preset radio stations
You can store up to 10 stations for FM and 10 stations for AM.
1. Use the **TUNE/SKIP** buttons to search for a desired station. Press the **MEM/SET** button and the station frequency will flash.
2. Press the **PRESET +/-** button to select a desired station number.
3. Press the **MEM/SET** button again to confirm the setting.
4. Repeat steps 1 to 3 to store any other desired stations.

Listening to a preset station
When listening to the radio, press the **PRESET +/-** buttons to select a preset radio station.

PLAYING AN iPod/iPhone AND CHARGING THE INTERNAL iPod/iPhone BATTERY

Installing an adapter on the iPod/iPhone docking station

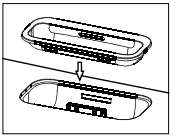

1. Remove the cover of the docking station at the top of the unit and insert the adapter (supplied with your iPod/iPhone) into the docking station with the two tabs facing forwards.
2. To remove the adapter, press the back of the adapter and pull it up.

Listening to your iPod/iPhone

1. With the correct iPod/iPhone adapter installed, gently dock the iPod/iPhone (without the protective cover) into the unit's docking station.
2. When the unit is switched on, press the **FUNCTION** button to select iPod mode.
3. Press the ▶II button to start playback. Press it again to pause playback. Press it again to resume normal playback.
4. Press the **TUNE/SKIP** buttons repeatedly to skip to the previous or next track.
5. Alternatively, you can use the controls on your iPod/iPhone directly.

Note:

- The internal iPod/iPhone battery will charge until it is fully charged.
- Adjust the volume control on the unit to the desired volume level using the **VOL** ▲/▼ buttons on the unit.
- To prevent sound distortion during iPod/iPhone playback on this unit, the EQ function in your iPod/iPhone must be set to "Off".
- The docking station is not designed for playing or charging an iPod Shuffle, but it is possible to connect the iPod's headphones jack to the **AUX IN** jack on the unit. In this case, please select the desired tracks directly on your iPod Shuffle.
- Playback of the iPhone will be suspended when there is an incoming call. You can pick up the call using your iPhone speaker phone function. After you have finished the call, playback will resume.

REPEAT playback

Press the ↻ button once to repeat the current track. Press it twice to repeat all the tracks. Press it a third time to cancel the repeat function.

RANDOM playback

Press the button to play the tracks in random order. Press it again to cancel the function.

AUX IN FUNCTION

*This unit has an **AUX IN** jack which allows you to connect your external audio devices such as MP3 players or an earlier iPod model.*

1. Connect a 3.5 mm stereo connection cable (not supplied) to the **AUX IN** jack on the back of the unit and the phones/line out jack on your external audio device.
2. When the unit is switched on, press the **FUNCTION** button to select AUX mode.
3. Operate your external audio device as usual to select and play the music.
4. Adjust the volume controls on both your external audio device and this unit to the desired volume level.

MAINTENANCE

Care and maintenance

To clean the casing, unplug the unit and wipe off dust and stains with a soft cloth moistened with a mild soap and water solution only. Do not use benzene, thinner or similar chemicals to clean the casing.

If at any time in the future you should need to dispose of this product, please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice (Waste Electrical and Electronic Equipment Directive).

TROUBLESHOOTING GUIDE

Problems	Recommendations
1.The player or display does not work properly.	1.1 Press the ⏻/ON button to go to standby mode and press it again to turn on the unit. 1.2 Press the **RESET** button with a sharp object to reset the unit. 1.3 Reset the unit by unplugging the AC power cord for a few seconds, then plug it back in.
2. No sound, poor sound.	2.1 Check the cable connections. 2.2 Use the **FUNCTION** button to select the correct mode.
3. Noise or distorted sound in radio mode.	3.1 FM mode: Extend and position the FM antenna to achieve the best reception. 3.2 AM mode: Orientate the AM loop antenna to achieve optimum reception.
4. No sound, poor sound in iPod mode.	4.1 Check that you have used the correct adapter. 4.2 The EQ function in your iPod/iPhone must be set to "Off". 4.3 Your iPod is not supported by the unit. Connect your iPod to the unit via the AUX IN jack

TECHNICAL SPECIFICATIONS

Radio

Tuning range	FM: 87.5 – 108 MHz AM: 522 – 1620 kHz
Antennas	FM: wire antenna AM: loop antenna

General

Output power (RMS)	4 W (2 x 2 W)
Power consumption	11 W
Speaker	2 x 2", 8 Ohm
Power source: AC/DC Adapter	AC 100-240V~50/60 Hz DC IN 10V 1.4A ⊖—●—⊕
Clock back up	DC 3V: 2 x 1.5V AA/LR06 size batteries
Dimensions	118 (H) x 180 (W) x 96 (D) mm
Weight	0.9 kg

Note:
Due to continuing improvements, the technical specifications are subject to change without notice.